


RC22 & 23 Wand

Telescopic Radiation Detector

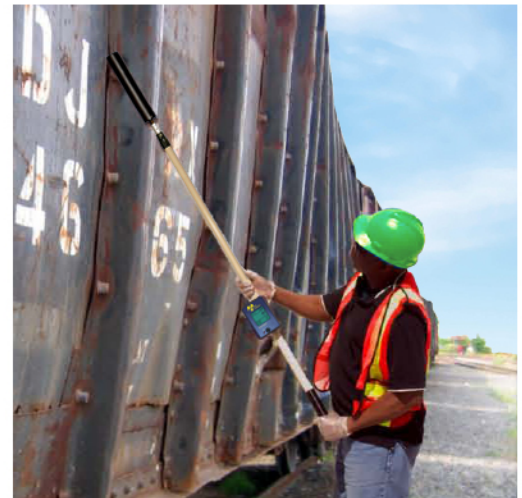

Pinpoint a potential radioactive source quickly and safely with a RC22 or RC23 Wand.

Fully Automatic and Operator Friendly

The RC22 and RC23 were designed to allow fast and easy inspection of areas, containers or vehicles that may contain radioactive material. Upon start up the unit will perform a background check and automatically set an alarm threshold for the user. In only seconds the RC22 and RC23 is ready for use.

Easy to Read Display with Audible Alarm

When radiation is detected the display will immediately show the increasing radiation levels. An audio alarm will also be activated to help locate the exact source of the radiation. The tone varies based upon the proximity and intensity of the radioactive source.

Available in Two Lengths and Two Head Sizes

RC22 is telescopic for a reach of 49" (124.5cm) to 99" (251.5cm). The telescopic pole serves two functions, one is to reach and scan an area that would normally be out of reach, and the second is to provide a safer operating distance between you and a potential radioactive source. The Wand is available in two different detector head sizes. The RC22 has a detector head size of 2 inches (5.1cm) for a total volume of 193cc. For greater sensitivity, the RC23 has a detector head size of 3 inches (7.6cm) for a total volume of 442cc.

FEATURES

- Fully automatic - easy to use
- Light weight
- Extendible for longer reach
- Easy to read backlit display
- Quick response time with variable alarm tone

RC22 & 23 Wand

SPECIFICATIONS

- Display:**
- Large 2.17”(55mm) x 2.17”(55mm) backlit display
 - LCD display.
 - Display radiation level in selected unit of measurement
 - Battery life
 - Background level
 - Alarm threshold
-
- Operation:**
- Single button activation automatically sets audio alarm threshold level and displays unit of measurements (CPS, nSv/h, uR/h)
-
- Detector:**
- PVT – 193cc & 442CC
 - Dose Rate: 2uR/Hr – 10 mR/Hr (20 NSv/Hr – 100 uSv/Hr)
 - Energy Response: 30Kev – 3.0Mev
 - Accuracy +/- 20%
-
- Temperature Range:**
- (+14°F to +122°F (-10°C to +50°C))
-
- Battery:**
- Two (2) NiMH 10,000 mA/h rechargeable
 - Two (2) Size “D” cell batteries
-
- Package Includes:**
- RC22 or RC23 fully charged and ready for use
 - Carrying Case
 - Rubber tip boot cover (Quantity 2)
 - Earphone
 - Universal battery charger
 - Operation manual

Size:

Model	Head Size	Extendable Length	Weight	Detector Volume
RC22 Short	2” (5.1 cm)	49” (125 cm) – 68” (173 cm)	5.2 lbs (2.4 kg)	193 cc
RC22 Long	2” (5.1 cm)	68” (173 cm) – 99” (252 cm)	5.4 lbs (2.7 kg)	193 cc
RC22	3” (7.6 cm)	49” (125 cm) – 68” (173 cm)	6.0 lbs (2.5 kg)	442 cc

