


# Observer Software



## Observer Software

The Observer software runs on a Windows platform and can be used with the Inspector, Digilert 50, and Geiger Radiation Monitors. As an option, any of our Radiation Alert® instruments can be modified to interface with the Observer. The Observer reads in Counts, CPM, and CPS and has the ability to collect, log, and perform statistical analysis on the data received. The data is displayed on a graph as well as digital and analog on-screen meters and can be saved or printed in various ways including a spreadsheet format. The dwell/count time can be adjusted for each point on the graph. You can also set the length of time for the count. The on-screen meters in the software have adjustable settings as well as a settable alarm in CPM. There are both visual and audio indicators, and you can play the meter click through your PC speakers.

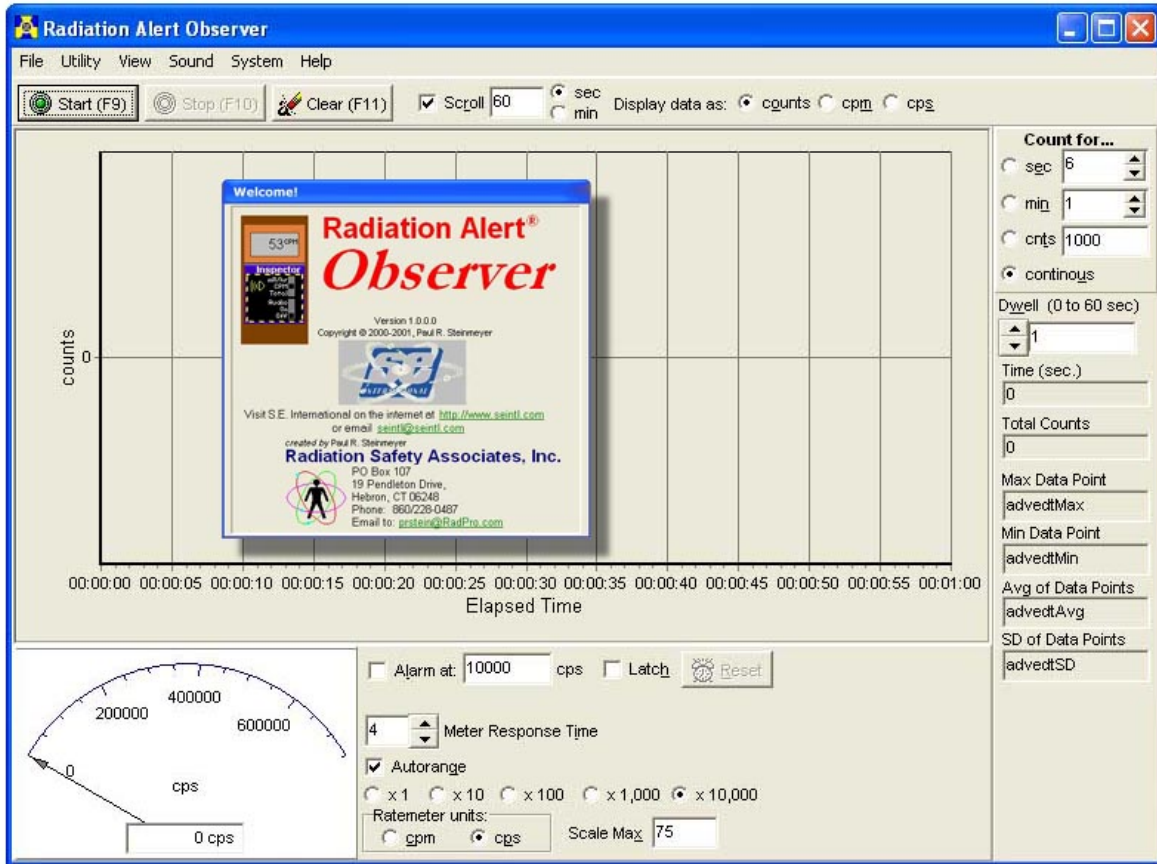