


MOBILETRACE® NARCOTICS

DETECT NARCOTICS IN SECONDS

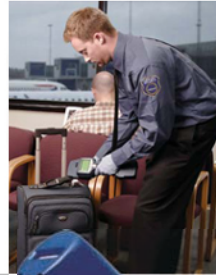

UNPARALLELED DETECTION TECHNOLOGY

- Detects narcotics in seconds
- Flexible user interface with a wide range of operating levels
- State-of-the-art battery for long life, hot swappable for continued operation
- Ergonomic design for grab-and-go portability
- Easy-to-access components for quick maintenance
- Network ready/USB compliant

DESIGNED FOR LAW ENFORCEMENT, CORRECTIONAL AND CUSTOMS USE DURING SCREENING OR AT CHECKPOINTS, THE MOBILETRACE® NARCOTICS DEVICE DETECTS ALL MAJOR CLASSES OF NARCOTICS IN SECONDS INCLUDING OPIATES, COCAINE- AND AMPHETAMINE-BASED DRUGS.

The MobileTrace® Narcotics includes Rapiscan® Systems tested and widely adopted ITMS™ technology with simplified sample results for non-technical users. The unit will give strong visual notifications of alarms, without the need for technical analysis. There are just two simple trigger buttons and a simple operating process via the color LCD touchscreen.

Designed for law enforcement, correctional and customs use during screening or at checkpoints, the MobileTrace® Narcotics device detects all major classes of narcotics in seconds including opiates, cocaine- and amphetamine-based drugs.


The MobileTrace® Narcotics includes Rapiscan® Systems tested and widely adopted ITMS™ technology with simplified sample results for non-technical users. The unit will give strong visual notifications of alarms, without the need for technical analysis. There are just two simple trigger buttons and a simple operating process via the color LCD touchscreen.

MobileTrace®		Drugs Detected	
Clear	Trig	Menu	Cal
N1		OK	
N2		OK	
N3		OK	
N4		OK	
N5		OK	
N6		OK	
N7		Detected	
N8		OK	
N9		OK	

SelectScan view showing substances in code format to maintain privacy.

MobileTrace®		Drugs Detected	
Clear	Trig	Menu	Cal
Substances Detected			
Substance	Time	Strength	
Neg	Time	Height	Pos
			Time
			Height

Peaks view is a tabular form of a Plasmagram view.

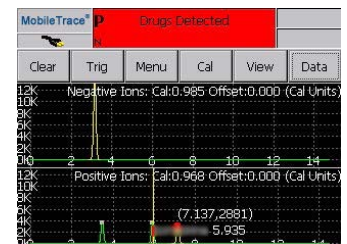

Plasmagram view shows peak height versus time-of-flight of the detected substance.

MOBILETRACE[®]NARCOTICS

STRONG TOOL, SIMPLE RESULTS

SENSITIVITY/SELECTIVITY

- Patented detection of a broad range of narcotics
- Patented ITMS technology detects microscopic traces of substances rapidly and accurately
- Semi-permeable membrane filters out dust and dirt for reliable operation in harsh environments with high traffic, humidity or contamination

VERSATILE

- Three default user levels (operator, maintenance and administrator) for access control
- Networking capability and USB connectivity
- Option to use substance codes instead of substance names for privacy and security
- Free software upgrades

EASY TO USE

- Touch screen with text, 3.5 in. (8.9 cm) color, glare resistant display
- User programmable responses to instrument warnings
- Touch screen keypad and optional keyboard
- Simple user interface
- Semi-automated or manual calibration
- Easy access to components for efficient maintenance

PORTABLE

- Lightweight 9.4 lbs (4.3 kg) with battery
- Shoulder strap and easy-access sample trigger buttons
- Main battery up to four hours, in-unit trickle charge
- Internal back-up batteries for maintaining uptime while swapping main battery
- Optional 12 VDC vehicle adapter for charging during transport

RELIABLE

- Auto-save to prevent data deletion
- Solid state flash hard disk

COST EFFECTIVE

- Shared components with other trace detectors may reduce consumables costs, ordering expenses and inventory requirements

PHYSICAL SPECIFICATIONS

Dimensions:	Length:	16.1 in. (409 mm)
	Width:	6 in. (152 mm)
	Height:	12.4 in. (315 mm)

QUALITY RESULTS, NO INTERPRETATION

- Strong and clear alarms
- Simplified user interface, basic software
- Customizable supervisory notes
- All sample data saved on board and downloadable
- Basic kit of accessories with additional items available
- Vapor kit
- 80 NIT glare resistant display
- Downloadable user manual and maintenance logs

With continual development of our products Rapiscan[®] Systems reserves the right to amend specifications without notice. Product pictures are for general reference. Please note that due to US laws and regulations, not all Rapiscan[®] products are available for sale in all countries without restriction. Please contact your Rapiscan[®] Systems sales representative for more information.



Rapiscan[®] Systems is ISO 9001:2008 Certified

