

RADIATION ALERT Ranger



The Ranger offers maximum performance in a lightweight, rugged solution for using your survey meter at the facility, or in the field. Though designed for industrial environments, the Ranger has all the features you've come to expect in the lab. The Ranger is a small, handheld, microprocessor-based instrument which offers excellent sensitivity to low levels of alpha, beta, gamma and x-rays and has built in efficiencies for common isotopes to calculate activity in Bq and DPM. It has a backlit digital display, a red count light and a beeper sounds with each count detected. Other features include selectable alert levels, an adjustable timer, and an optional wipe test plate for swipes. Internal memory and the free Observer USB Software allow you to download your data, set computer alarms, and calibrate your instrument.

Detector

Internal Halogen-quenched, uncompensated GM tube with thin mica window, 1.4-2.0 mg/cm² areal density. Effective diameter of window is 45 mm (1.77 in.). Radiation symbol on front label marks the center of the detector.

Averaging Periods

Display will update every 3 seconds. At low background levels, the update is the moving average for the past 30-second time period. The timed period for the moving average decreases as the radiation level increases.

Operating Range

mR/hr - .001 (1μR) to 100 CPM - 0 to 350,000
 μSv/hr - .01 to 1000 CPS - 0 to 5000
 Total/ Timer - 1 to 9,999,000 counts

Accuracy

(Referenced to Cs137) Typically ±15% from factory, ±10% with NIST Source Calibration

Size

5.5 X 2.7 X 1.3 in. (140 X 68 X 33 mm)


Energy Sensitivity

3340 CPM/mR/hr referenced to Cs137

- Detects Alpha down to 2 MeV.
- Detects Beta down to .16 MeV; typical detection efficiency at 1 MeV is approx. 25%.
- Detects Gamma down to 10 KeV through the end window. Smallest detectable level for I125 is .02 μCi at contact.

Built-In Efficiencies

⁵Sulfur (S35), ⁹⁰Strontium (Sr/y90), ¹³⁷Cesium(Cs137), ³²Phosphorus (P32), ¹⁴Carbon (C14), ¹³¹Iodine (I131), ⁶⁰Cobalt (Co60), and Alpha

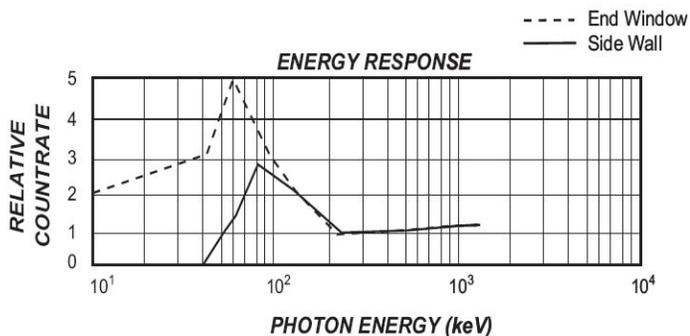

Ranger

Display

Backlit Graphic LCD with Backlight

Count Light

Red LED flashes with each radiation event.

Alert Set Range

mR/hr .001 - 50
CPM 1 - 160,000. 70db @ 1m.

Alarm Indicator

Internally mounted beeper
(can be switched off for silent operation)

Outputs

USB and Bluetooth 4.1 with included Observer Software Family for PC and Android OS

Anti-Saturation

Meter will hold at full scale in fields as high as 100 times the maximum reading.

Power Requirements

Two AA alkaline batteries.
Battery Life: 800 hours under normal use

Includes

Carrying Case, Xtreme Boot, Stand, Mini-USB Cable, Observer USB Software Download, Certificate of Conformance

Options


Wipe Test Plate, NIST Calibration

Limited Warranty

1 year limited



Ruggedized Boot and Stand included with every unit.

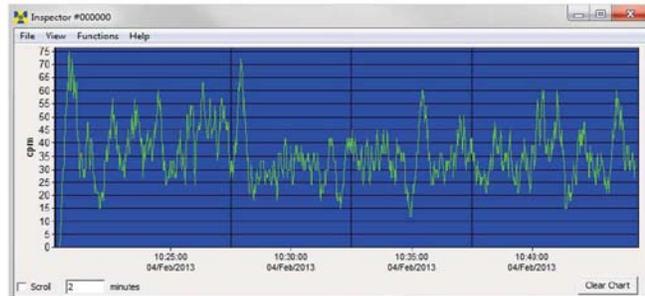

USB Observer Software collects data stored in the internal memory of the SEI Ranger



Wipe Test Plate

