


HazClass 1

Hazardous Material Test Kit

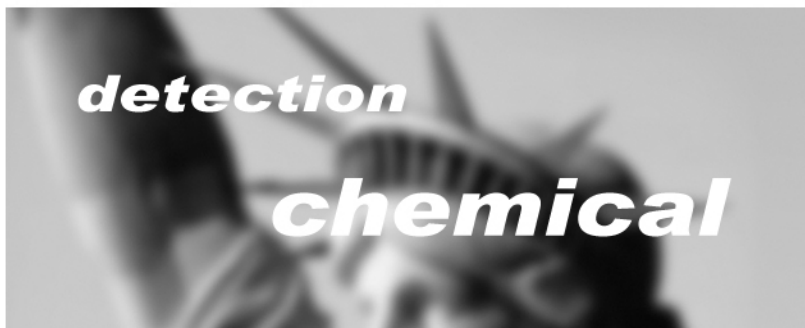

The HazClass® Kit 1 is a hazardous materials test kit designed to provide first responders a rapid and easy method to determine if unknown or suspicious materials present a possible chemical, radiological or biological hazard to the responder, population or surrounding environment. The procedure is not designed to identify the chemical, but to determine if a possible hazard may exist. The HazClass® Kit 1 maybe used by any personnel with basic HazMat training skills. TheHazClass® Kit 1 can be used in any situation where hazardous materials may be of concern.

The HazClass® Kit 1 can be used for the determination of EPA-RCRA Characteristic Hazardous wastes which are Ignitability, Corrosivity and Reactivity. The HazClass® Kit will help in the determination of certain DOT classes, material compatibilities, and labeling for transportation and disposal.

APPLICATIONS

- Abandoned containers or drums
- Illegal drug operations
- Chemical inventories
- Household chemical cleanups
- Unknown powders
- Suspicious materials
- Confirm labeling
- Roadside dump sites
- Determine bulking compatibilities
- Check decon and PPE compatibility

QUALITATIVE CATEGORIES

- | | |
|--------------------------|-----------------------------|
| Corrosive Acid | Air Reactive Materials |
| Corrosive Acid Oxidizers | Reactive Sulfides |
| Corrosive Bases | Reactive Cyanides |
| Corrosive Base Oxidizers | Chlorinated Hydrocarbons |
| Flammable Liquids | Sugars |
| Combustible Liquids | Starches |
| Heat Sensitive Materials | Biological Agents (protein) |
| Oxidizers | Radiological Material |
| Water Reactive Materials | Gamma Emitting Materials |

